TECHNICAL INFORMATION Rev.00



Pulsarlube BT APP General Guidance (ANDROID)

1. General Guidance Before Running APP

- 1. Pulsarlube BT APP & SERVER are available with a customer admin account (ID, Password) which is issued separately by sales reps or distributors.
- 2. The customer admin is able to register customer employees and then set a user access mode either registration mode or general mode.
- <u>Registration Mode</u> [for interworking between unregistered lubricators and APP/SERVER]
 The ID authorized for registration; who can register lubricators or cancel the registered lubricators on server.
- <u>General Mode</u> [for control and checking the registered lubricators]
 General mode is available with only the account authorized of general mode.

3. Not only E-mail address but also a general ID are allowed to sign in.

2. Settings





🗱 🐳 🗿 🛇 38% 🖬 AM 12:54

Pulsarlube BT APP Login (ANDROID)

F .	∦ 🐳 🖗 🛇 38% 🖬 AM 12:54					
<	Login					
	Fül/ARLUBE					
1	Enter user ID					
0	Enter password					
Reç	Registration					
Start						



P.

Registration Mode

General Mode



Pulsarlube BT APP Registration Mode (ANDROID)

1. Main View & Features

Scan unregistered lubricators & Register in charge ID



2. Register Lubricators

Select lubricators (more than one / all selectable) and touch 'Register'

P7	\$ ¥{ 🕅 🕅 🛇 46%	AM 12:54		P	\$ ₩ 🔋 🛇 46	% 🛢 AM 12:54		P	\$ 💐 है 🛇 46%	a 🖩 AM 12:54
©	pçl/arlube	Logout		©	¢ÿL∫ARLUBE	Logout		®	fÿl /ar lube	Logou
Select All		Register		Select All		Register		Select All		Registe
BTCAA0	53	୍		BTCAAO	63	Q		BTCAA0	63	Q
BTCAA1I	DF 💮	Q	>	BTCAA1	DF	O,	>	BTCAD1	DF	Q
BTCADO	a M	Q		BTCADO	9A	Q		Register(2	2)	~
BTCAD1	DF	୍		BTCAD1	DF	O,		BTCAA1	DF	Q
								BTCADO	9A	Q

2:54 gout



Pulsarlube BT APP Registration Mode (ANDROID)

3. Cancel Registered Lubricators



4. Exit from Registration Mode

Touch 'Logout'

•	考 💐 🗟 🛇 46% 🛢 AM 12:54		
©	₽ÿLJARLUBE	Logout	
Select All		Rester	
BTCAA0	63	0	
BTCAD1	DF	O,	
Register(2	2)	~	
BTCAA1	DF	O,	
BTCADO	9A	Q,	

>

Touch 'Logout' on a pop-up menu





Pulsarlube BT APP General Mode (ANDROID)

Detail view & Control





Pulsarlube BT APP Lubricator Name Setting / Change (ANDROID)

1. Set Lubricator Name

Touch 'Rename'





2. Change Lubricator Name

Touch a lubricator name to change for 3 seconds







Pulsarlube BT APP Lubricator Control (ANDROID)

Touch detail view





Touch 'BT lubricator operation settings'





Select Grease Type (PL1 ~ PL20 and customizing grease selectable) Select Dispensing Period (1 ~ 12 months) Purge Grease (purge stop is only available by the lubricator unit) Find Lubricator (LCD BLU blinks when found)



Pulsarlube BT APP Group Add / Change (ANDROID)

1. Add Group

Touch '+Add Group' (required password for group lock)

© PÿL/A	* ¥ ? © 74% ₽ AM 12:54 RLUBE
+Add Group	Deselect All
BTCAA056	Rename >
BTCAA05B	Rename >
MOTOR 01-1 BTCAA063	>
MOTOR 01-2 BTCAD1E7	>
MOTOR 01-3 BTCAD1DF	>
TEST 01 BTCAD1CD	>



2. Add Lubricators on Group

Select lubricator name	Select group name	Touch '+Add Group'	
≅ \$ ¥} ? © 75% û AM 12:54 ⊘ P <u>UL∕ARLUBE</u> ⊛		a * ¥I ₹ © 75% 0 AM 12.54 ⑦ PŢL/ARLUBE ⑧	≅ \$ ¥! ? © 75% û AM 12:54 @ PUL/ARLUBE @
+Add Group Deselect All	+Add Group Deselect /	All Deselect All	+Add Group Deselect All
BTCAA056 Rename >	BTCAA056 Rename	BTCAA056	BTCAA056
BTCAA05B >	BTCAA05B BTCAA058	BTCAA05B > BTCAA058	BTCAA05B > BTCAA05B
MOTOR 01-1 DECAA063	MOTOR 01-1 BTCAA063	MOTOR 01-1 >	FACTORY 1(2)
MOTOR 01-2 BTCAD1E7	MOTOR 01-2 BTCADIE7	MOTOR 01-2 > BTCAD1E7	MOTOR 01-1 > BTCAA063
FACTORY 1(0) V	FACTORY 1(0)	r FACTORY 1(0)	MOTOR 01-2 > BTCAD1E7
FACTORY 2(1)	FACTORY 2(1)	FACTORY 2(1)	FACTORY 2(1)
MOTOR 01-3 >	MOTOR 01-3 BTCAD10F	MOTOR 01-3	MOTOR 01-3 BTCAD1DF



Pulsarlube BT APP Group Add / Change (ANDROID)

P	¥ ¥ 😤 🋇 75% 🖬 AM 12:54
© FÿL/A	RLUBE 🐵
+Add Group	Deselect All
BTCAA056	Rename >
BTCAA05B BTCAA05B	>
FACTORY 1(2)	<u>_</u> ~
MOTOR 01-1 BTCAA063	>
MOTOR 01-2 BTCAD1E7	>
FACTORY 2(1)	~
MOTOR 01-3 BTCAD1DF	>

If password is not set when creating a group, group lock function is unavailable

3. Change Group

Touch group name for 3 seconds



1. Group constructors can control the locking group without the password.

2. Other accounts must enter password to control the locking group.

3. Change the group password.

- The group password can be changed only by a group constructor.
- If password is forgotten, it can be reset or changed on the BT server.

